

 
## CARE AND MAINTENANCE

### Important Note:

Before operating screen please review this manual. Keep this manual in a safe place for future reference. If issues arise that require information not found in this manual contact your screen supplier.

### CAUTION

- Do Not lean or push against the mesh.
- Keep children a safe distance from the screen.
- This screen is not intended as a security device.
- Care should be taken as pets can damage the mesh.
- Do not expose to open flames, sparks or intense heat.

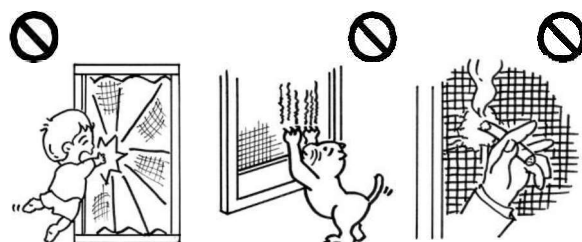


### Operating Instructions

To open and or close the screen, gently pull or push the Sliding Bar to the desired position. For best performance use the handle or the Sliding Bar and operate at waist height.

The screen should be operated at a slow pace. Do not slide the screen with excessive force. The Sliding Bar operates manually, and should slide with ease.

If the mesh becomes rumbled/wrinkled, completely close over the screen, then cycle the Sliding Bar in both directions until the pleats are straightened.

 When sliding the screen check to see if the hooks are moving freely. If the hooks are catching on the mesh bend down and straighten them before continuing to operate the screen.

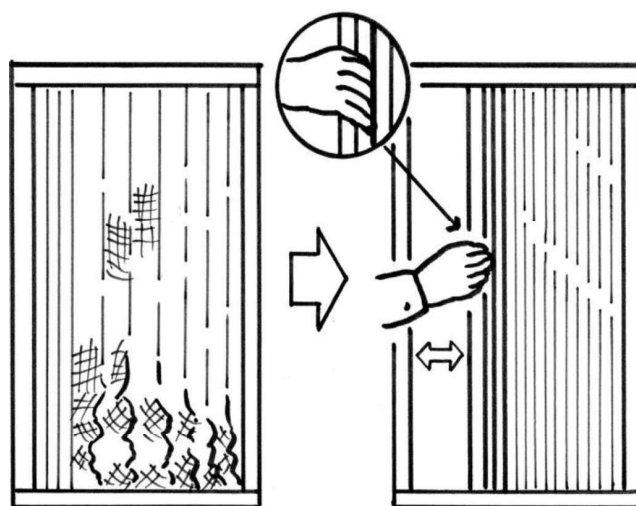


Do not leave your screen open for extended periods of time. Return the screen to the canister when not in use, this will help keep the mesh protected and help maintain the shape of the pleats.

Do not use the screen during heavy winds and keep it safely stored to avoid damage. If your screen is open in heavy winds assist the closing operation by placing your hand against the mesh.

The optional mesh hook assists in holding the mesh in place when exposed to moderate winds. If undue force is applied by high winds or accidental impact the hook is designed to help protect the screen.

 In the event that the hook has released reattach any loose hooks to the bottom tension cord before operating the screen.

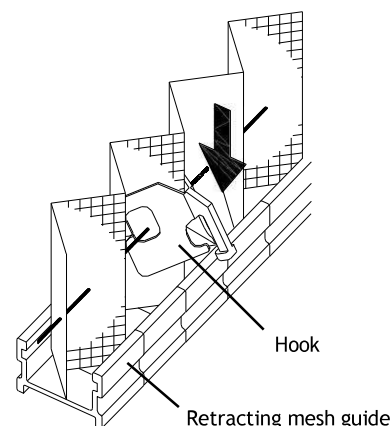

Monarch EX2 Shown

## CARE AND MAINTENANCE

### Cleaning:

Accumulation of dust, debris, and pet hair may cause the screen operation to become heavy and tight. Keep the Bottom Rail free of such debris. After cleaning spray the Bottom Rail with silicone spray.

If the mesh accumulates excessive dust or debris remove it gently with a soft duster brush, then wipe the mesh using a damp cloth. Place your hands on either side of the mesh and wipe vertically along the pleat line as if kneading it. Do not apply excessive force, and rinse with a gentle spray of clean water.

To wash the screen, wipe using a damp cloth soaked in lukewarm water and mild detergent, then rinse using a damp cloth soaked in clean water.

Cleaning of the screen must be carried out at frequent intervals. Failure to carry out regular maintenance may exclude the application of this warranty. The frequency of cleaning will depend on the environment in which they are installed.

Cleaning of the screen must be carried out at frequent intervals. Failure to carry out regular maintenance may exclude the application of this warranty. The frequency of cleaning will depend on the environment in which they are installed. The following maintenance levels are recommended for maintaining the screens optimal operational condition.

### Environment Type:

Mild-Rural and domestic areas: minimum every 6 months

Moderate-Cities and light industrial areas: minimum every 3 months

Severe-Coastal and heavy industrial areas: minimum every month

### Caution:

After washing, dry the screen with a soft cloth before operation.

Do NOT scrub the mesh or the frame with a wire with course brushes.

Do NOT use thinner, benzene, alcohol, cleanser, acid / alkaline or otherwise harsh detergents on the screen, these substances will permanently damage the mesh.

