
Retractable Screen (Double Sliding Panel)



- Thank you for purchasing the Retractable Screen (Double Sliding Panel).
- Please read the instructions in this manual carefully prior to commencing installation.
- Tools required for installation; an electric driver, Phillips screwdriver, tape measure, level and carpenter square.

■ Parts List

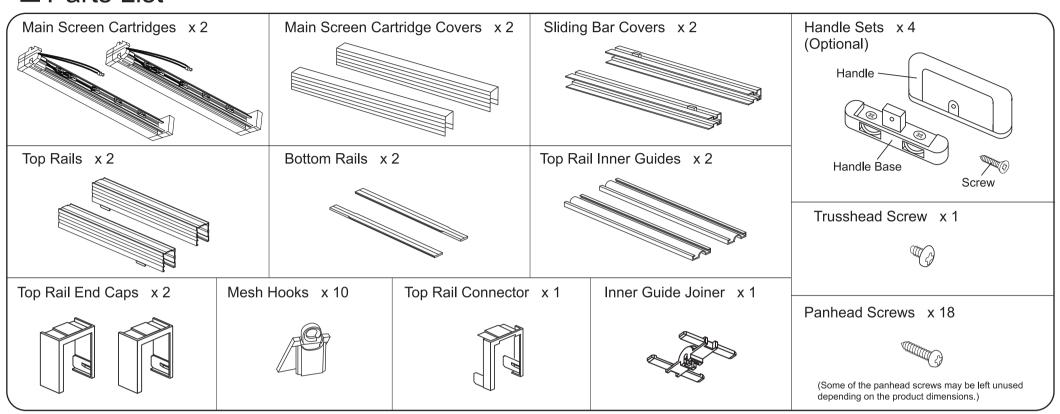


■ Prior to Installation

Prior to the installation, all surfaces where any screen component is to be installed must be flat, straight, square, plumb and level. Surfaces must be free of dirt and debris.

■ Installation Procedure


1 Installing the Top Rails

(1) Attach only one Top Rail End Cap to each Top Rail at the end closest to the Sliding Bar Guide.

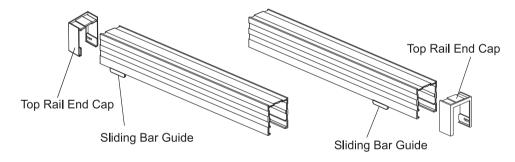


- (2) Remove the backing from the double sided tape at the top of the Top Rails.
- (3) Press one Top Rail onto the underside of the frame with the End Cap against the side of the frame. Insert the Top Rail Connector into the end of one Top Rail. Fit the second Top Rail to the first by inserting it into the Connector and press it in place onto the underside of the frame.

Note: Top Rails should be centered in the opening, and set in a perfectly straight line.

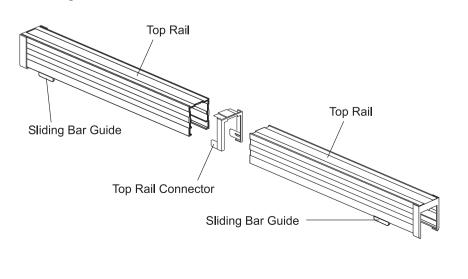


(4) Adjust the Top Rail End Caps to eliminate any gaps between the Top Rails and the side of the frame.

Fix the Top Rail in place using panhead screws.

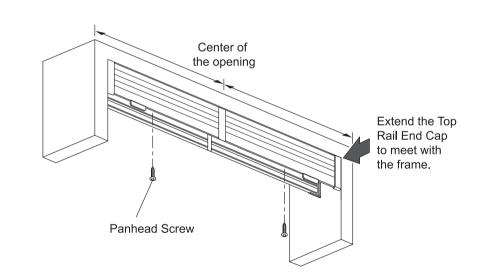


2 Installing the Top Rail Inner Guides

(1) Join two Top Rail Inner Guides with the Inner Guide Joiner.

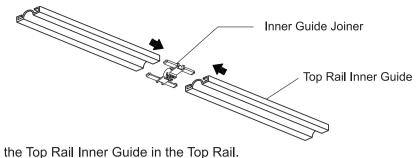


(2) Fix the Top Rail Inner Guide in the Top Rail.

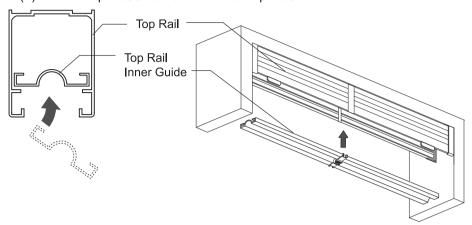


3 Installing the Main Screen Cartridge Covers

- (1) Remove the backing from the double sided tape on the Main Screen Cartridge Covers.
- (2) Tilt each Cover placing one end into the Top Rail. Bring the Cover to a vertical position on the frame, plumb and perpendicular with the Top Rail resting the bottom on the threshold below, press against the frame, the tape will temporarily hold it in place.
- (3) Fix the Main Screen Cartridge Covers in place using panhead screws.

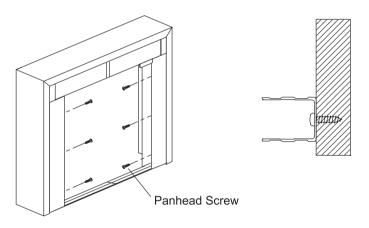


4 Installing the Bottom Rails

- (1) Clean the surface area where the Bottom Rails are to be installed.
- (2) Remove the backing from the double sided tape on the Bottom Rails.
- (3) Note: The narrow end of the Bottom Rails install at opposite sides of the opening, that closest to the Main Screen Cartridge Cover. Determine and mark the center of the opening. Align the center of the Bottom Rail's narrow end with the center of the Main Screen Cartridge Cover.
- (4) Before pressing the Rails in place, care should be taken to be certain both will meet in the center of the opening, and that they will follow a perfectly straight line from one side of the frame to the other, then press in place.

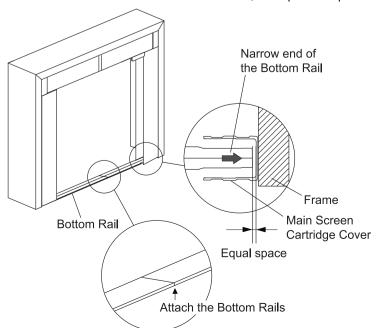


5 Installing the Main Screen Cartridges

(1) Tilt the Main Screen Cartridge and insert the top of it into the Main Screen Cartridge Cover.

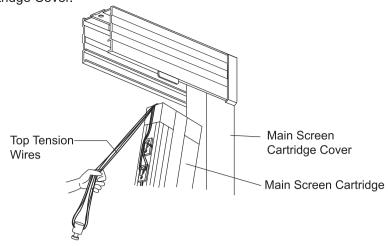

Caution When installing the Main Screen Cartridge, pull and hold the wire sticking out of the top of the cartridge. By doing so, ensure the wire is not caught between the cartridge and the cartridge cover.

(2) Bring the Main Screen Cartridge to a vertical position, move downward to meet the Bottom Rail. Press the Cartridge firmly into the Cover until a "click" is heard. If unsure of a secure connection, place fingers inside and behind the mesh and press against the PVC base of the Cartridge firmly.

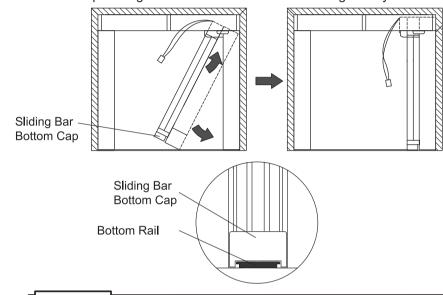



Caution Be certain the Main Screen Cartridge is sitting directly onto the Bottom Rail. Failing to do so will may cause damage to the screen.

(3) Install the Main Screen Cartridge on the other side using the same procedure.


Fixing the Roller Pieces

(1) Assured that the wires are not tangled, insert the Roller Pieces attached to the wires on each Main Screen Cartridge into the slots in the Inner Guide Joiner on both sides.

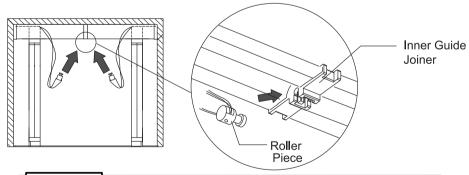

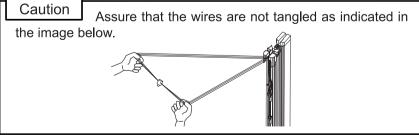

(2) Once the Roller Pieces are fitted to the slots, install a trusshead screw to prevent the Roller Pieces from falling off.

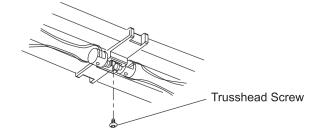


7 Adjusting the Tension Wires

Note: • Although the tension wires are pre-adjusted at our factory, fine adjustment may be needed. Refer to the explanation below and make the adjustment if needed.

Prior to making any adjustments, cycle the slide bar several times, at least as far as to meet with the other Sliding Bar. Observe the operation, should any of the below conditions apply, only then should adjustments be necessary.

Note: • Adjust only Adjusters #1 and #2.

Loosen the Adjuster Screws and adjust. When complete, tighten being careful not to overtighten. Overtightening may cause damage to the Adjuster.

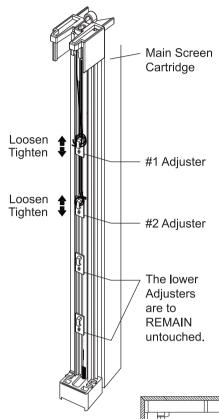


- If the Tension Wires are loose
 Move Tension Wire Adjusters #1 and #2 to tightening direction.
- If operation of the Sliding Bar appears tight or stiff

Move Tension Wire Adjusters #1 and #2 to loosening direction.

If the Sliding Bar tracks diagonally


If the Sliding Bar tracks diagonally, as in the image below, or, when placed against the other Sliding Bar, the Sliding Bar Bottom Cap does not meet with the one on the other Sliding Bar, move Tension Wire Adjusters #1 slightly to loosen, or #2 slightly to tighten.


If the Sliding Bar tracks diagonally in the opposite direction, move Tension Wire Adjusters #1 slightly to tighten, or #2 to loosen.

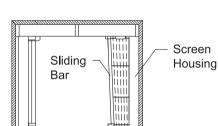

8 Installing the Sliding Bar Covers

(1) Before installing Sliding Bar Cover, orientation of the Anti-Lift Stop and Sliding Bar Guide need to be located on the same side of the screen. Carefully fit the Sliding Bar Cover onto the Sliding Bar.

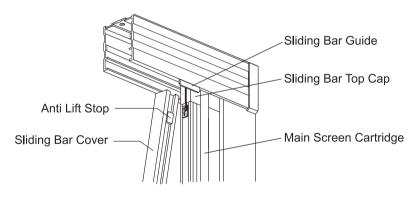


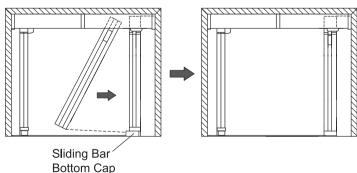

- (2) Close the screen so the Sliding Bar is at least in the center of the opening. With the palm of a hand on the leading edge of the Sliding Bar, and fingers tucked in the back side against the base of the Sliding Bar, squeeze the two components togther until a "click" is heard.
- (3) Install the Sliding Bar Cover on the other side using the same procedure.

9 Adjusting the Anti Lift Stops


- (1) Remove the tape from the Anti Lift Stop.
- (2) Move the Anti Lift Stop upward until the clearance between the Sliding Bar Guide and the Anti Lift Stop becomes 1/16" (2mm).

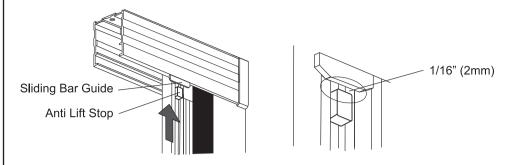


- (3) Fix the Anti-Lift Stop by pressing it against the Sliding Bar, when doing so, place other hand at opposite side to prevent any damage.
- (4) Adjust the Anti Lift Stop on the other Sliding Bar Cover using the same procedure.

10 Installing the Handles (Optional)


(1) Note: The Handle can be attached at any height, 39" (1 meter) is common. Before installing the Handles, attach the Handle Base to the Sliding Bar Cover. Insert the Handle Base into the groove in the Sliding Bar Cover, and secure with screws provided.

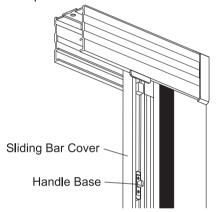

(2) Install the Handles by pressing it against the base, when doing so, place other hand at opposite side to prevent any damage.

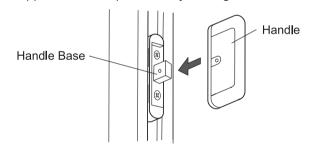

(3) Fix the Handle and Handle Base in place using screws.

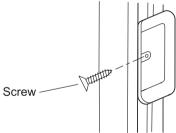

- (4) Use the same procedure to install the Handle on the other side.
- (5) Install the Handle on the other Sliding Bar Cover using the same procedure.